



BK. Attach the Brackets on both sides: Attach the two brackets on both ends of side rails,


Note: Please do not tighten fully, keep all loosely Bolted, You will tighten these in further step after attaching the Legs.

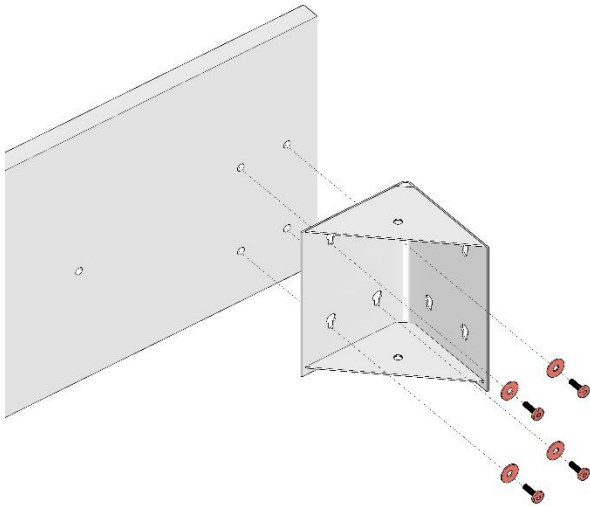


AK. Adjustable Levelling Support Bracket: Attach the support bracket by using 2 Bolts.

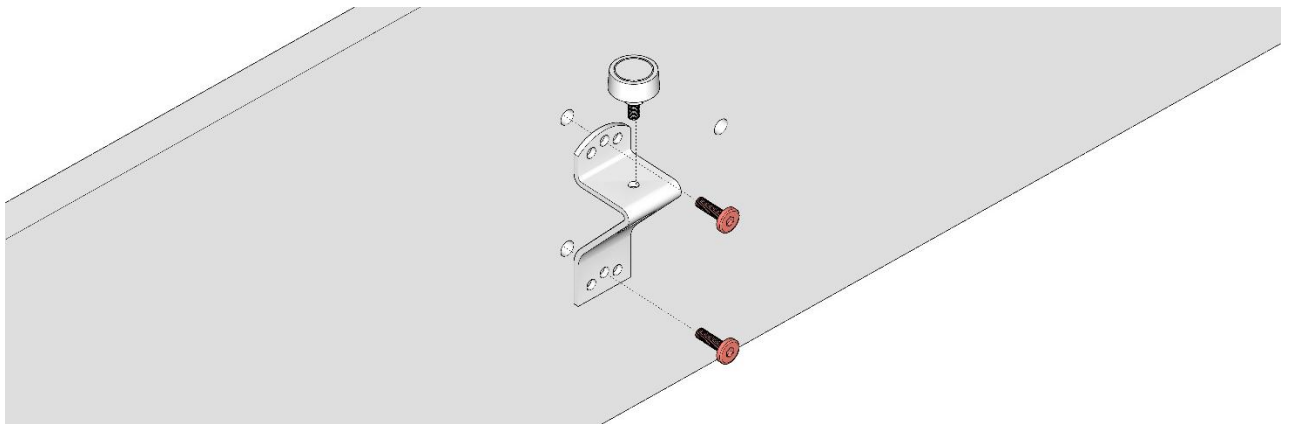


SK. Ottoman Hinge Pair: Attach the Ottoman hinge by using plastic nylon washer and Bolts.

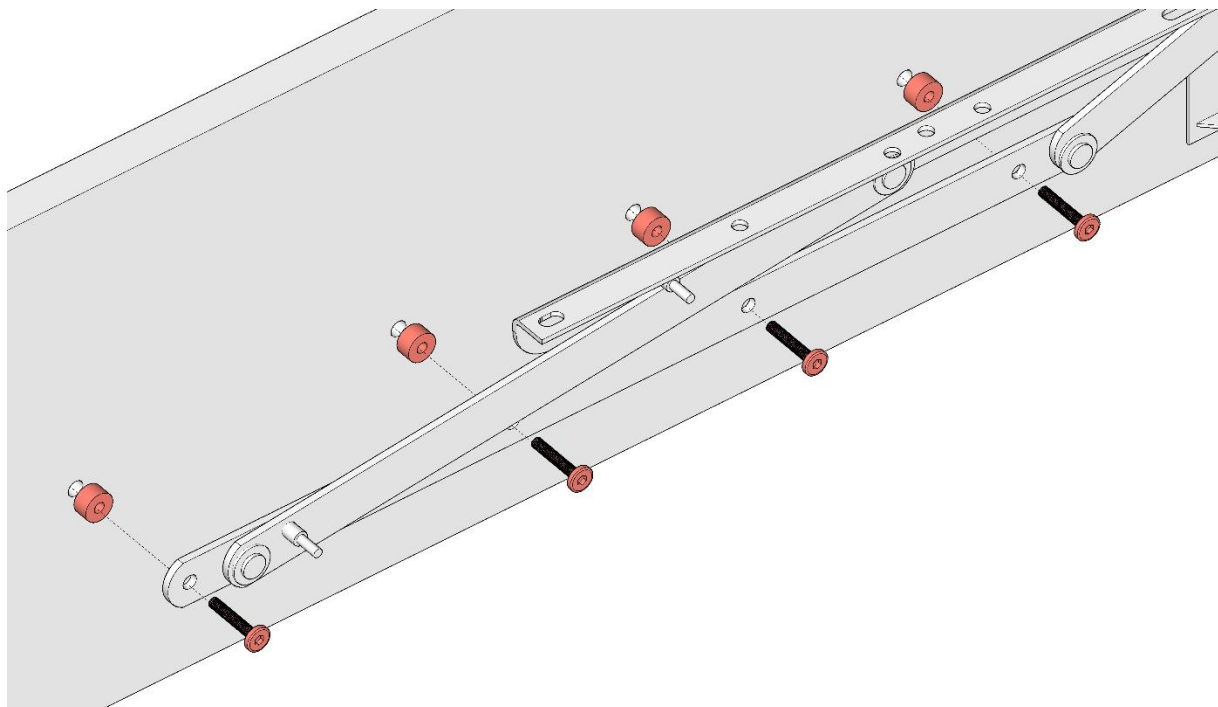

Step 2: Prepare Front and Back Rails

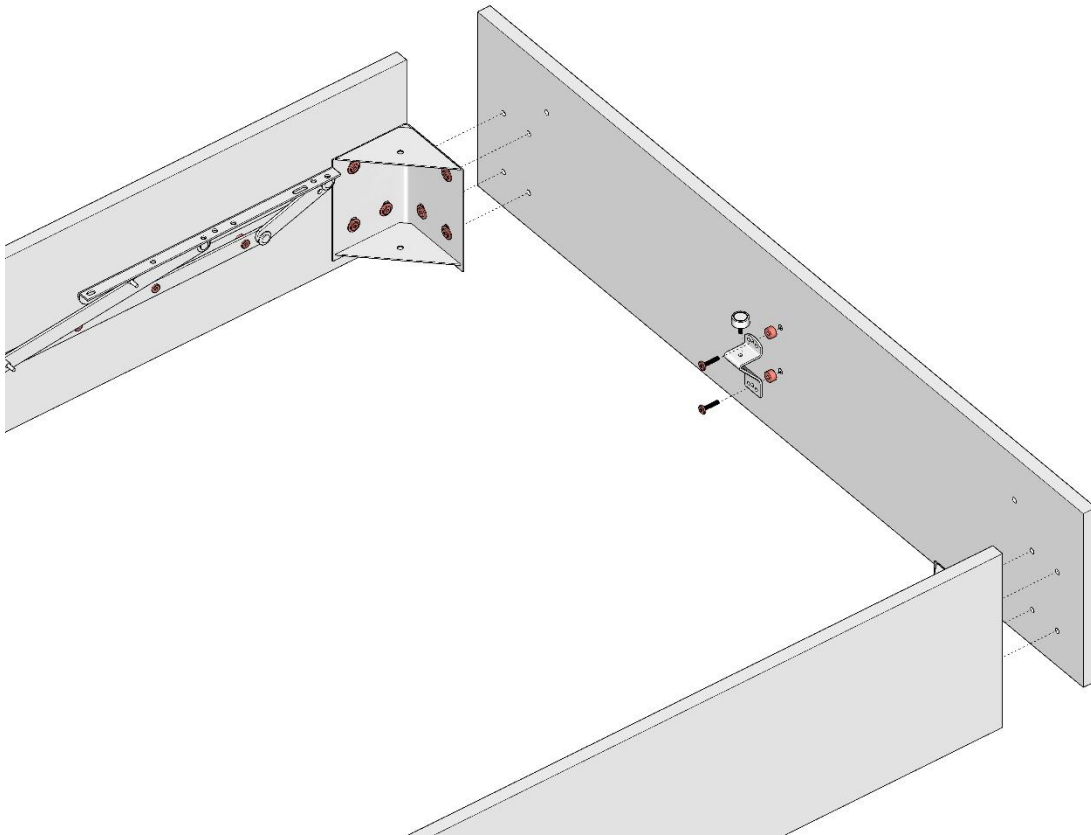


AK. Adjustable Levelling Support Bracket: Attach the support bracket by using 2 Bolts and washers on Front and back rail.

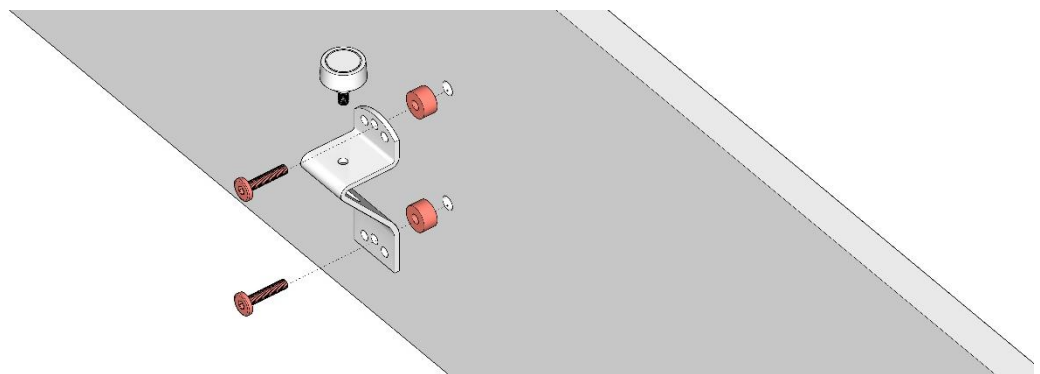


BK. Attach the Brackets on both sides: Attach the front and back rails

Note: Please do not tighten fully, keep all loosely Bolted, you will tighten these in further step after attaching the Legs.

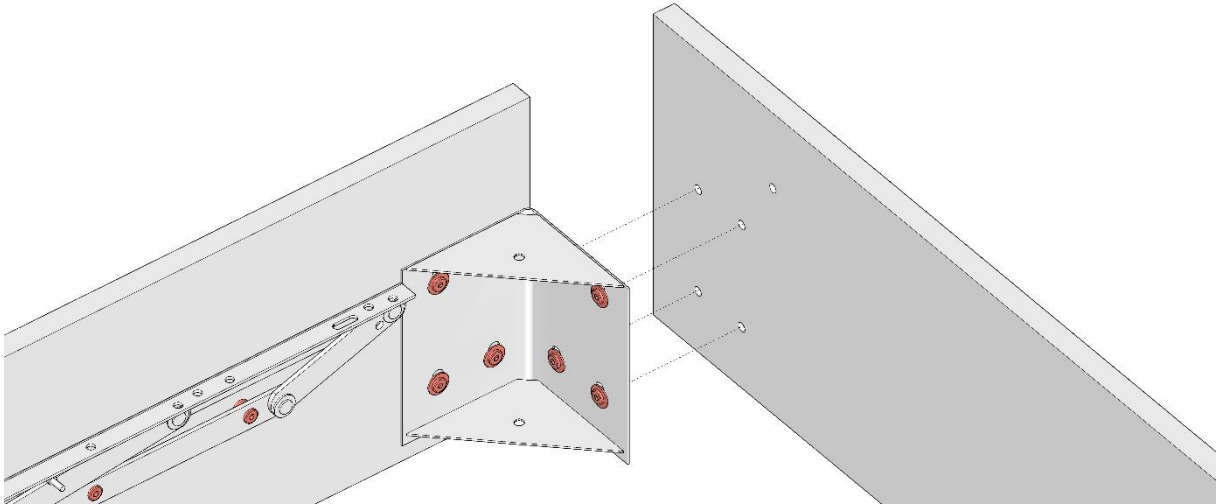

Step 3: Attach the Leg


- attach all four legs by using nut and washer
- Tighten the all loosely bolted fixings of Corner bracket attached to side and cross rails of the bed as frame is settled now in gravitational force.

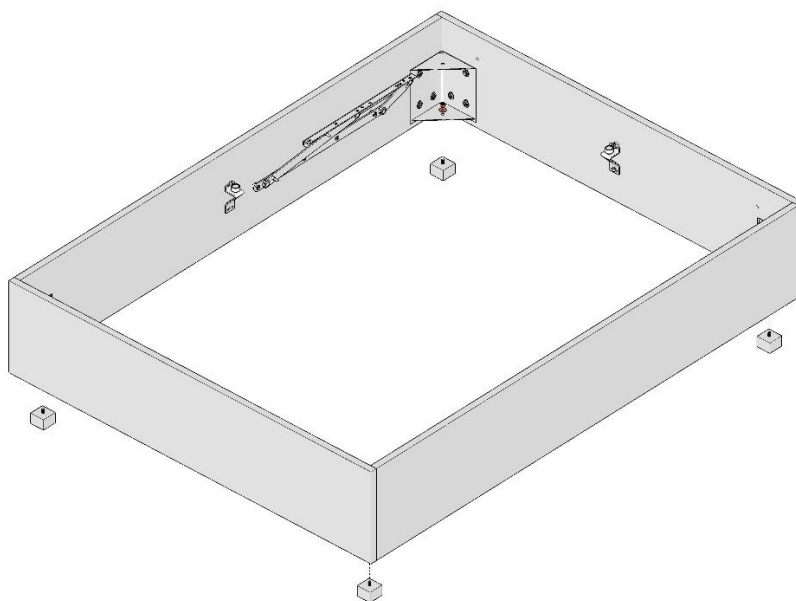

Step 4: Assemble the Bed Base Frame by using instruction.

THE
BED SLATS
WORKSHOP

Instructions
Dual Row Langham Bed

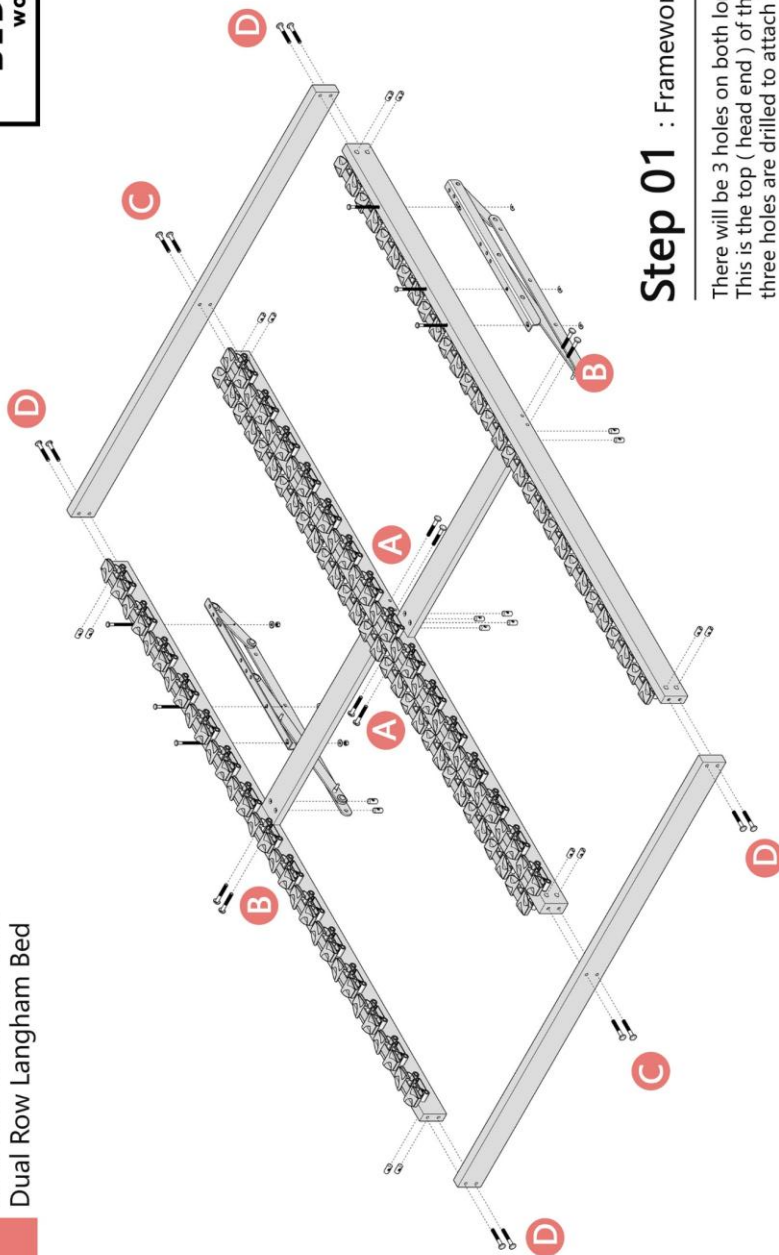

Step 01 : Framework Assembly

There will be 3 holes on both long side rails.
This is the top (head end) of the bed base. The
three holes are drilled to attach the bed hinges.

Step I : Join A

A 20mm Cross Dowels &
70mm Furniture Connector Bolts

Step II : Join B


B 20mm Cross Dowels &
60mm Furniture Connector Bolts

Step III : Join C & D


C 30mm Cross Dowels &
60mm Furniture Connector Bolts
D 25mm Cross Dowels &
60mm Furniture Connector Bolts


Last Updated : 08/23 | All Rights Reserved © The Bedslates Workshop 01

Step 5: Attach the Bed base to Hinge

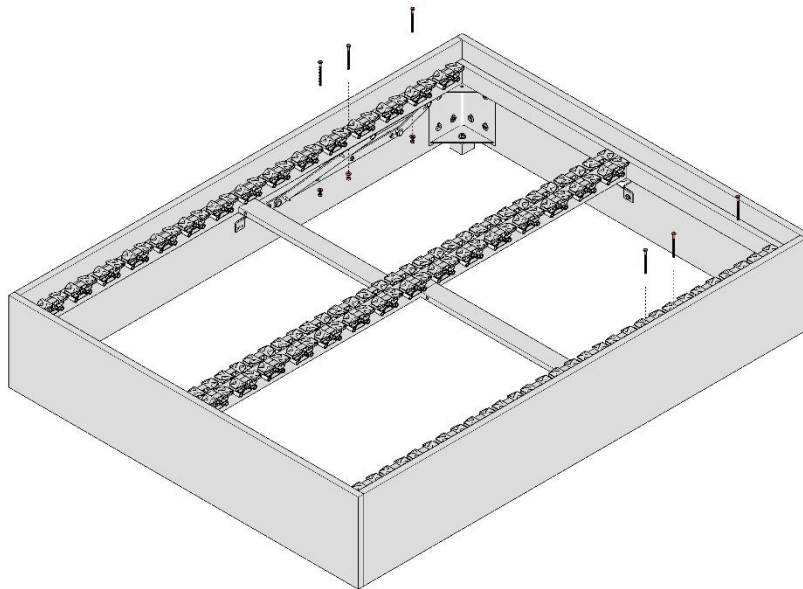

Step 6: Attach the Slats to the Bed Base

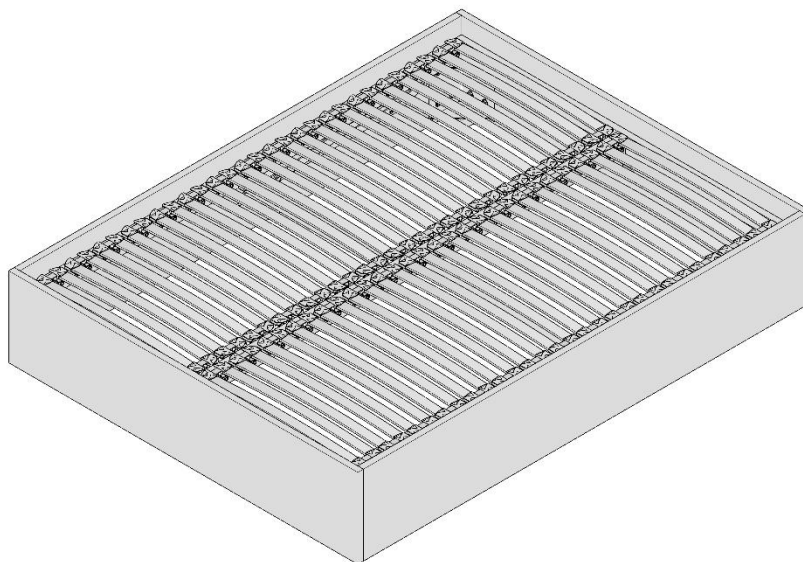

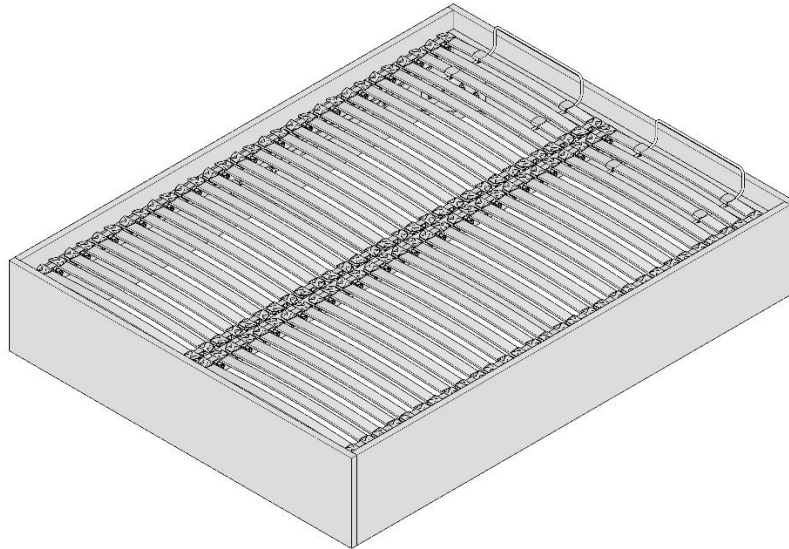Step 7: Attach the Mattress Stopper.**Step 8: Attach Gas Struts to Bed Hinges**

Lift-up the bed base first to attach the Gas Struts. Gas Struts are very powerful, you will not be able to compress these without attaching them to the bed hinges. You need to use leverage from the Slatted Bed Base and the weight of the Mattress.

