

How To Assemble

Goring Upholstered Bed Frame Dual Row




Tools: Allen key and spanner



Skill: Basic DIY

Before you start: Read the instructions and check all parts and fixings. Assemble on a clean, level surface to protect the upholstery.

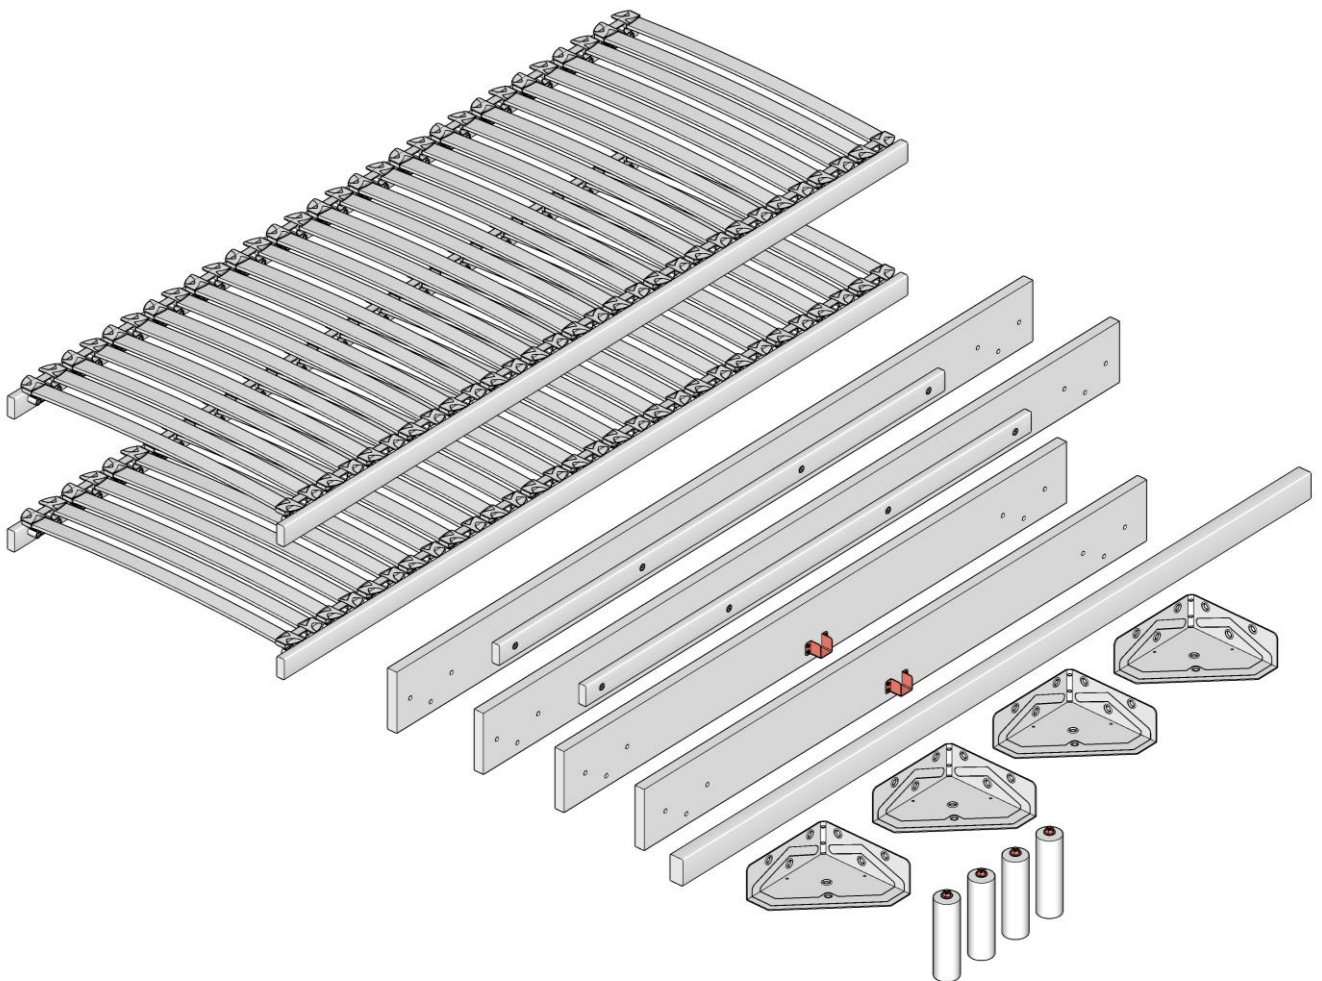


Step 1: Attach the Corner Brackets


Lay out both side rails with their bed base support strips facing inwards. Fit two corner brackets to each side rail, one at each end.

Fixings: 12 × M8 x 30 mm bolts and 12 washers in total. Use three bolts and washers for each bracket.

Note: Leave these bolts loosely fitted. You will fully tighten them in Step 3, after attaching the legs.

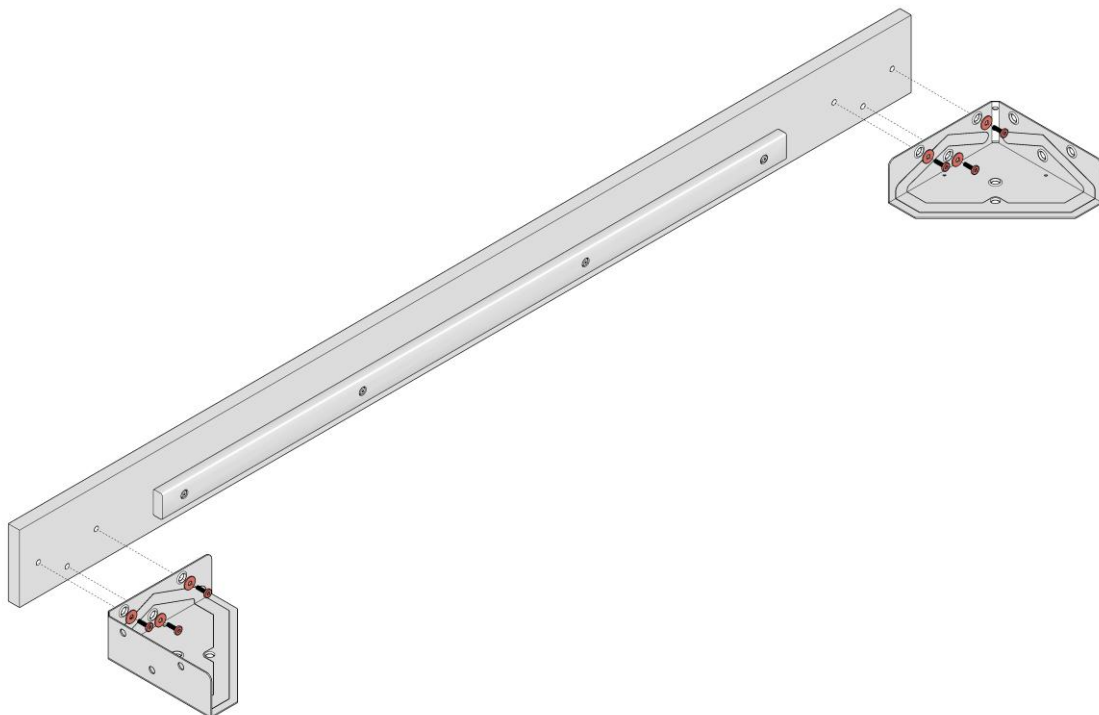

Fit two brackets to each side rail

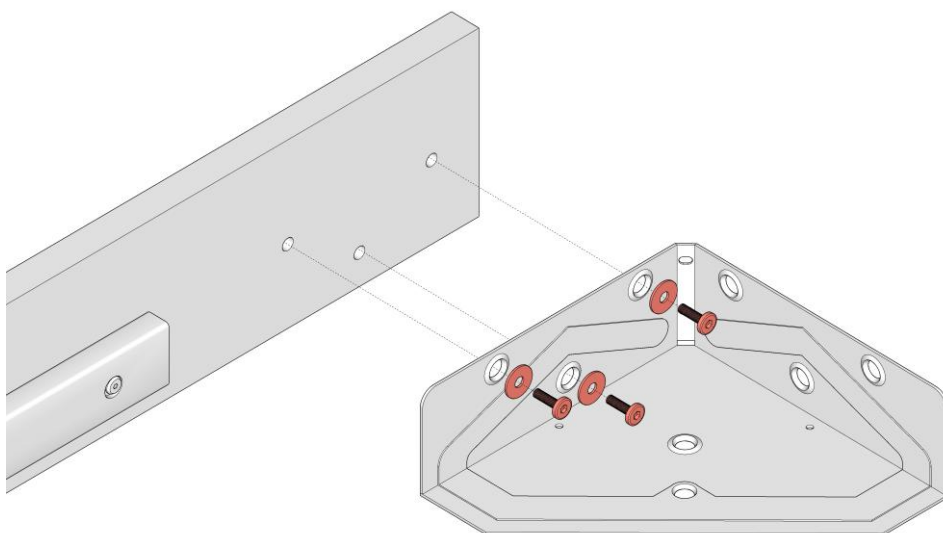


Corner bracket detail with three bolts and washers

Step 2: Attach the Cross Rails


Position the front and back cross rails between the side rails. Align the holes and attach each cross rail to the corner brackets.

Fixings: 12 × M8 x 30 mm bolts and 12 washers in total. Use three bolts and washers at each corner.

Note: Keep these bolts loosely fitted. Fully tighten all corner bracket bolts in Step 3, after attaching the legs.

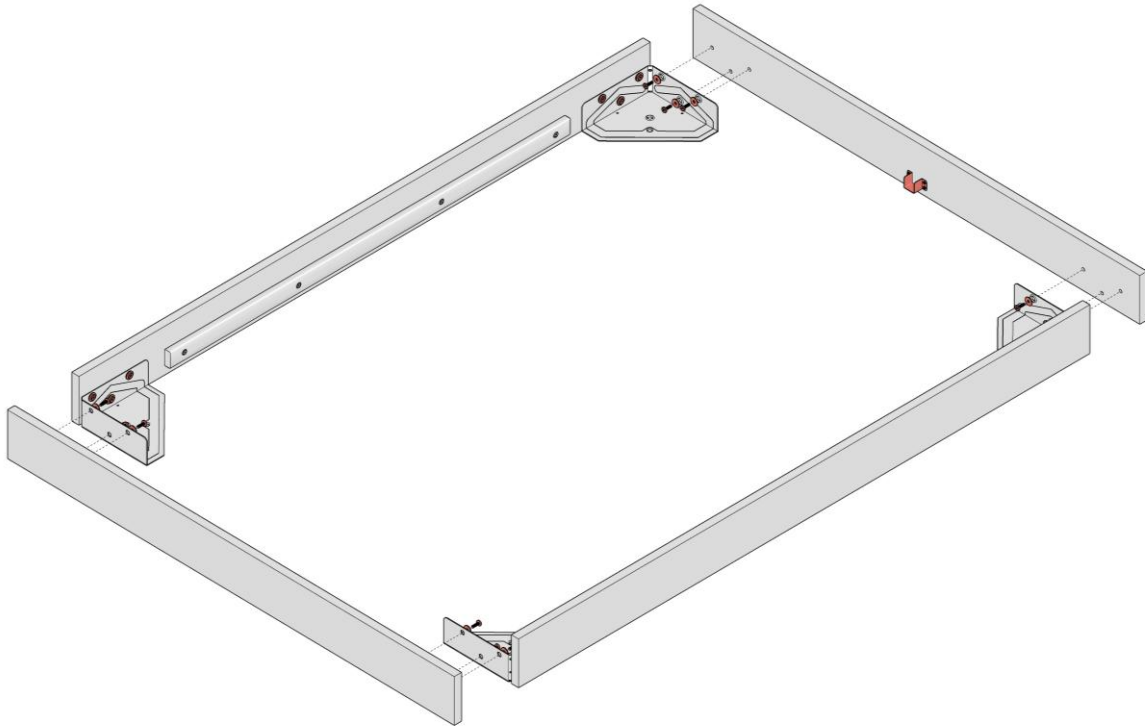

Join the front and back cross rails to the side rails

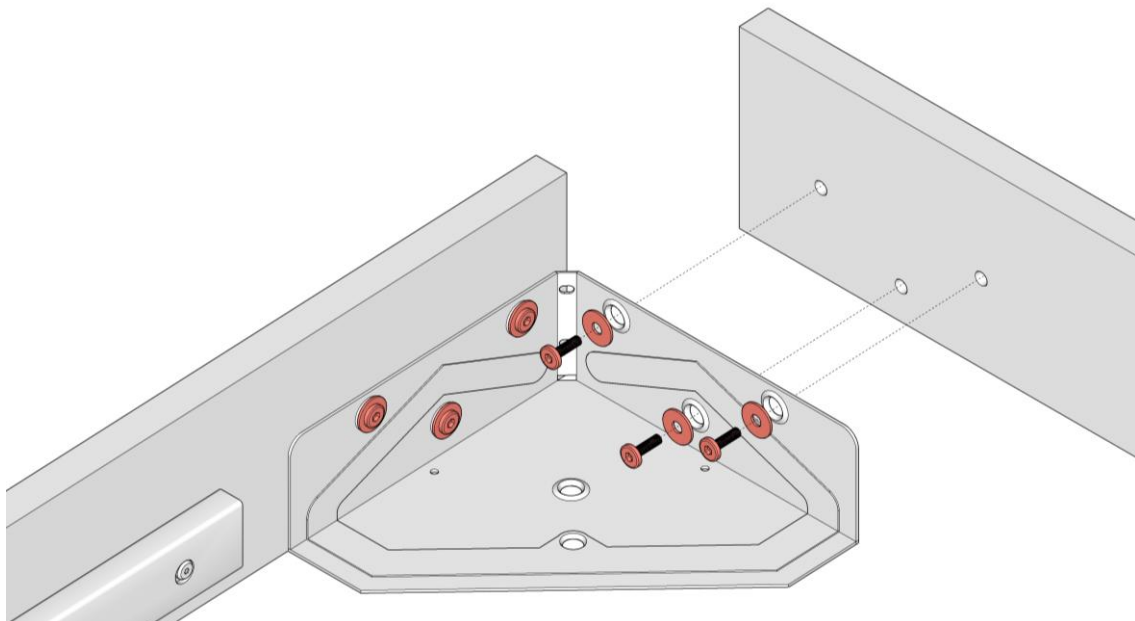


Cross rail fixing detail


Step 3: Attach the Legs

a. Fit all four legs

Fit each leg beneath a corner bracket. Pass the threaded stud through the hole in the bottom of the bracket, then fit the supplied washer and nut. Tighten the nut securely with a spanner.

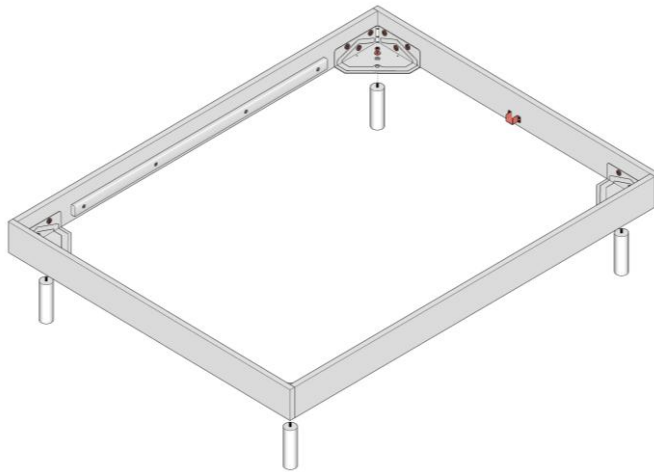


Fit all four legs

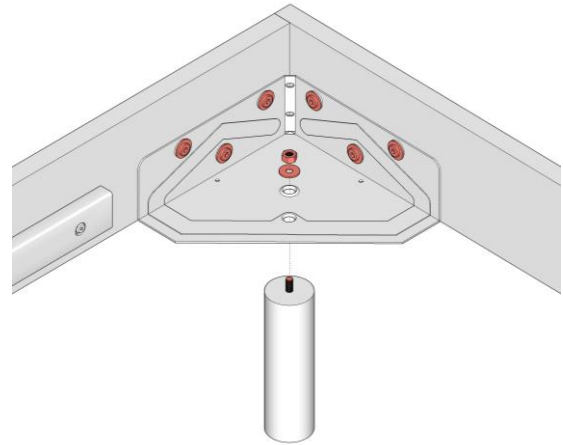

Leg fixing detail

b. Fully tighten the frame


With all four legs fitted, set the frame upright on a level surface and allow it to settle. Insert the center rail into position, then fully tighten all corner bracket bolts fitted in Steps 1 and 2.

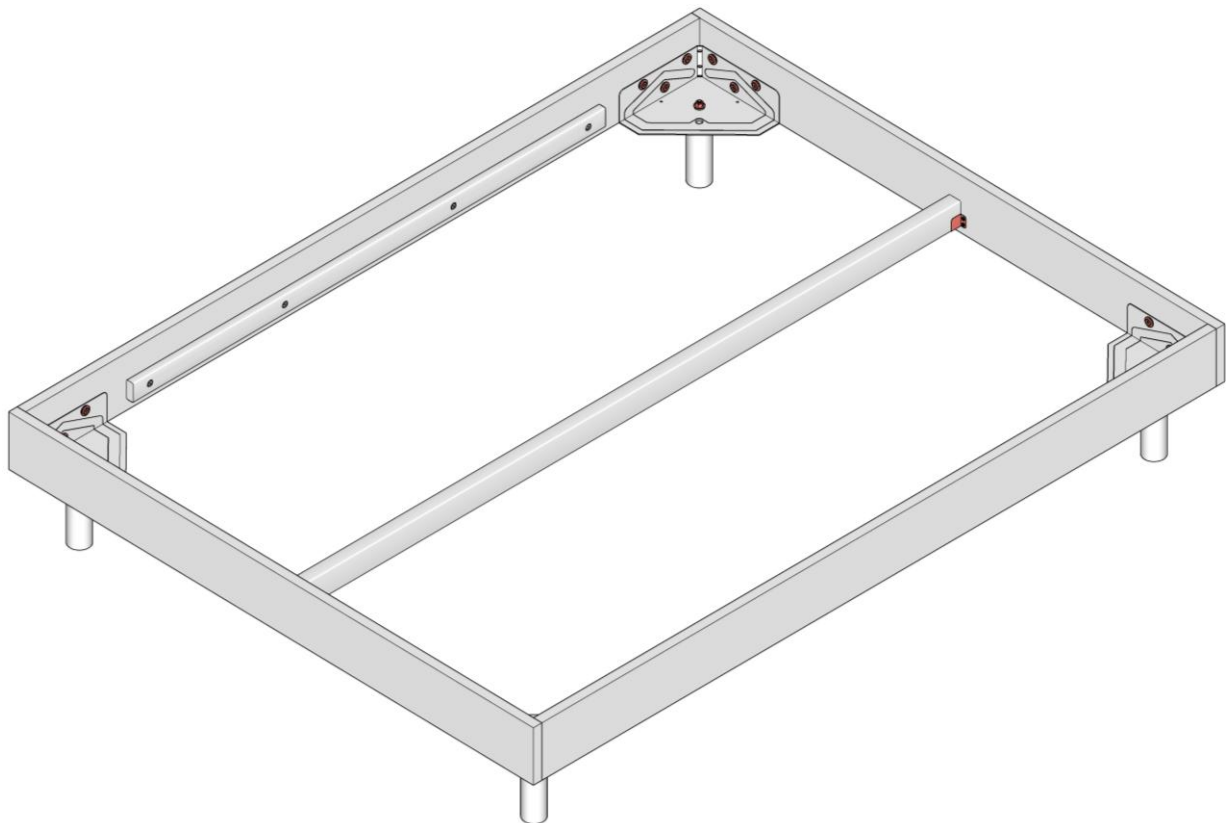


Frame ready for the bed base

Step 4: Attach the Bed Base

Lower the pre-assembled slatted bed base into the frame one at a time and join them using the connecting bolts provided.

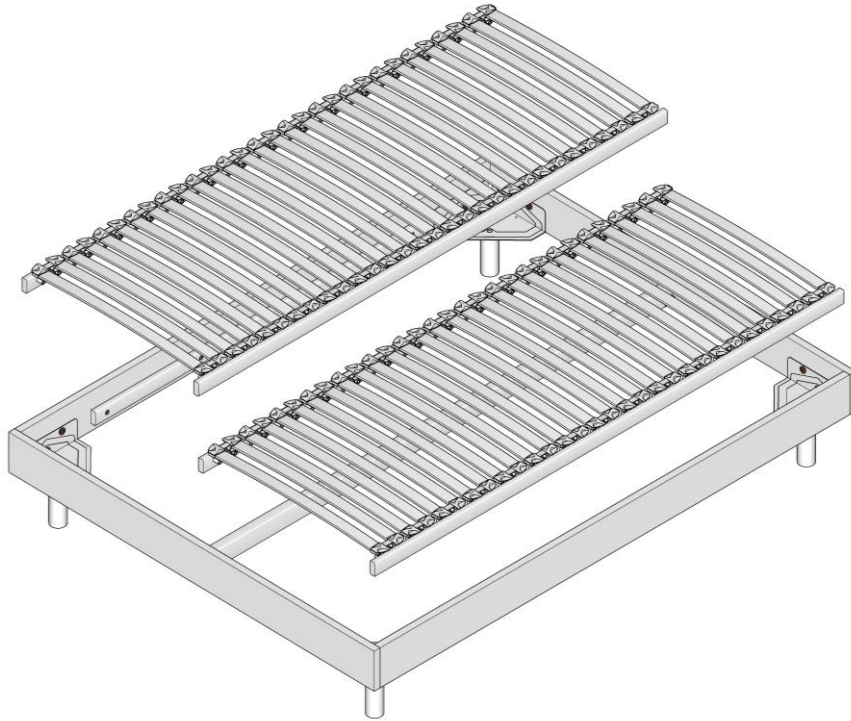

Lower the slatted bed base into the assembled frame

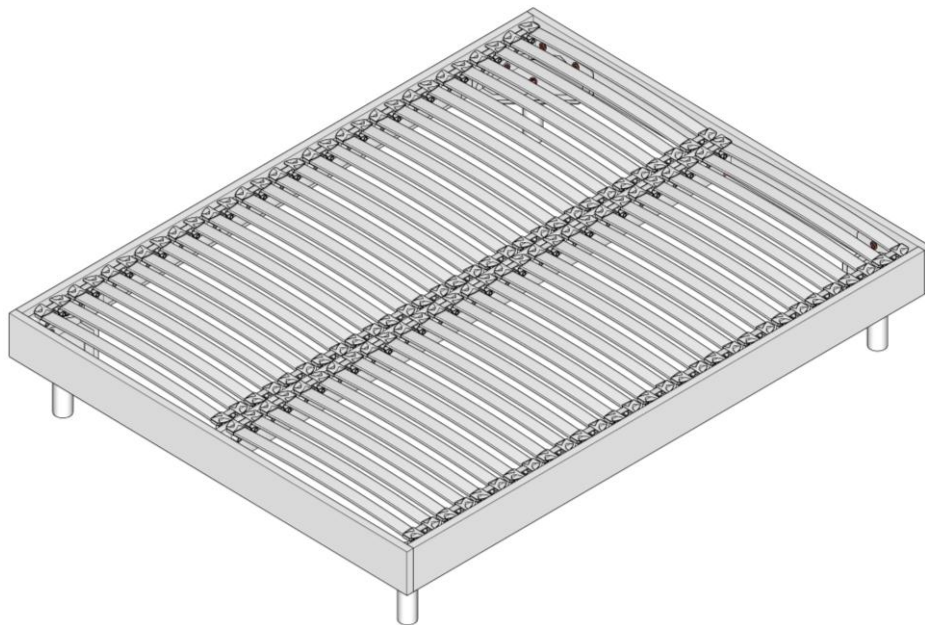

The bed base seated inside the frame

Final check: Ensure the bed base is seated evenly and all bolts, washers and nuts are secure before placing the mattress on the bed.