


Single Row Langham Bed | Upholstered Bed Frame




Step 1: Prepare Side Rails

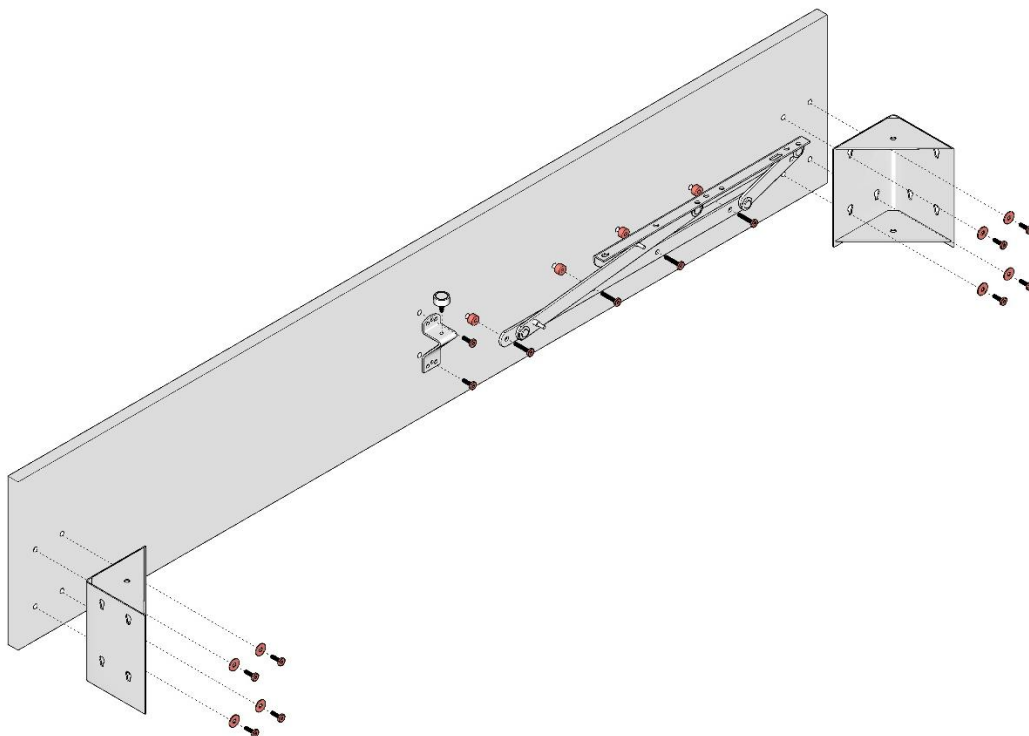


BK. Attach the Brackets on both sides: Attach the two brackets on both ends of side rails,


Note: Please do not tighten fully, keep all loosely Bolted, You will tighten these in further step after attaching the Legs.

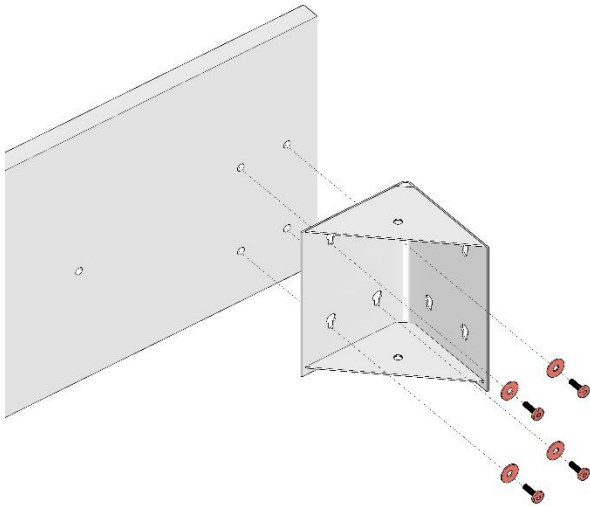

AK. Adjustable Levelling Support Bracket: Attach the support bracket by using 2 Bolts.

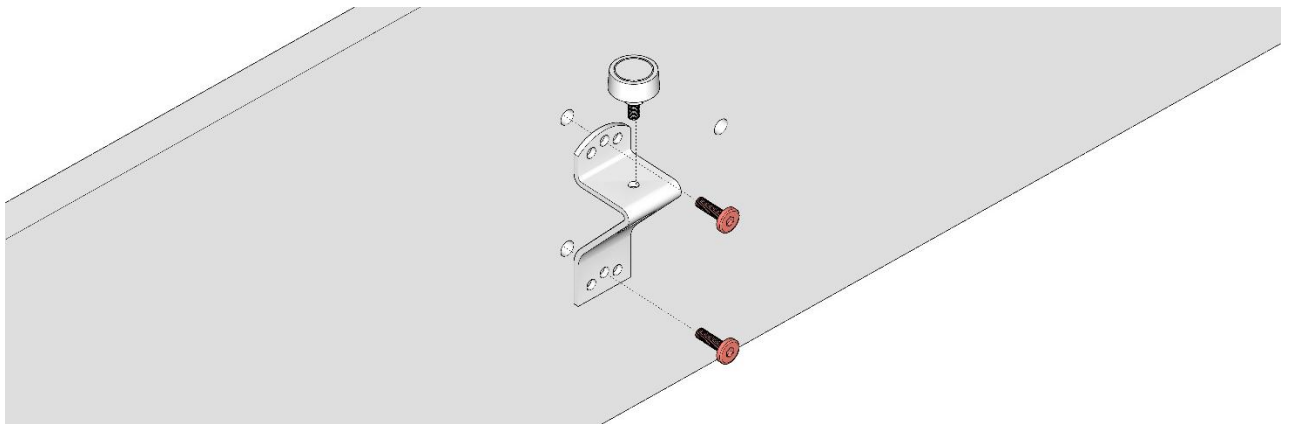



SK. Ottoman Hinge Pair: Attach the Ottoman hinge by using plastic nylon washer and Bolts.

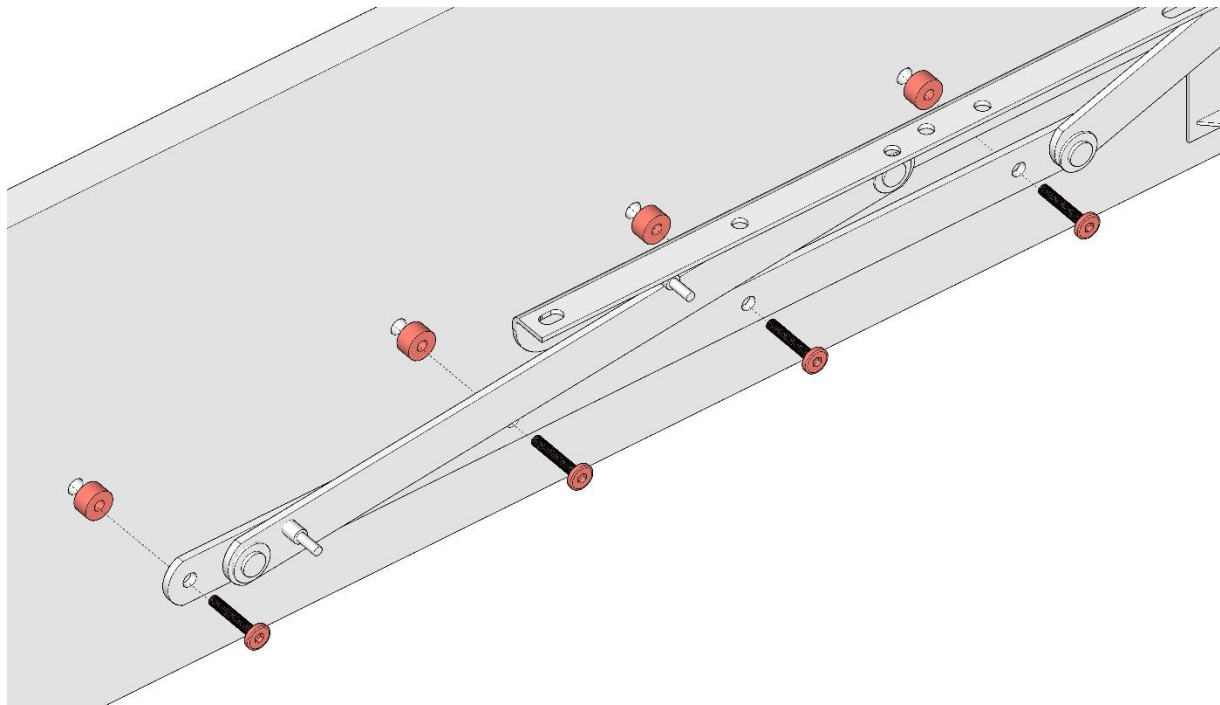

Step 2: Attach Front & Back Rails


BK. Attach the Brackets on both sides: Attach the front and back rails

Note: Please do not tighten fully, keep all loosely Bolted, you will tighten these in further step after attaching the Legs.

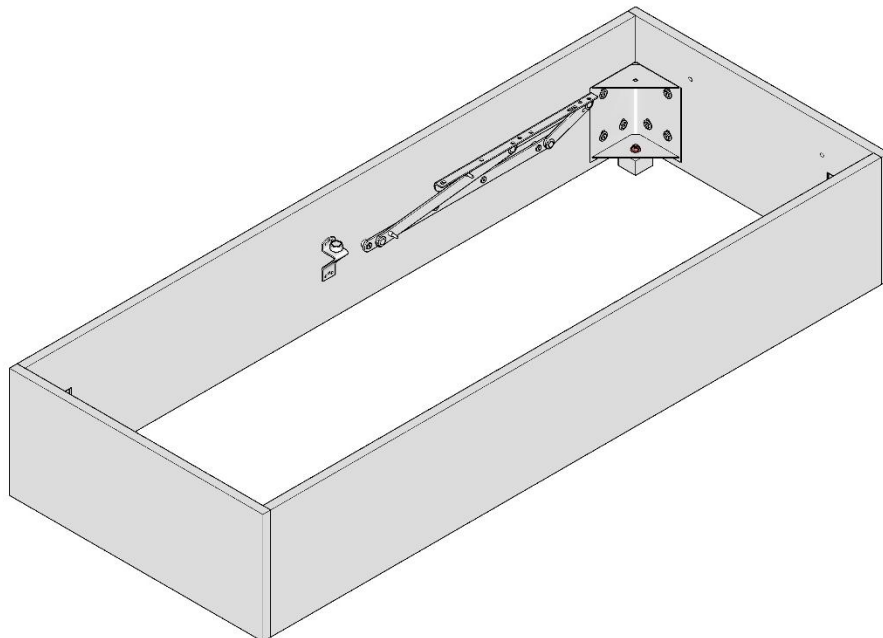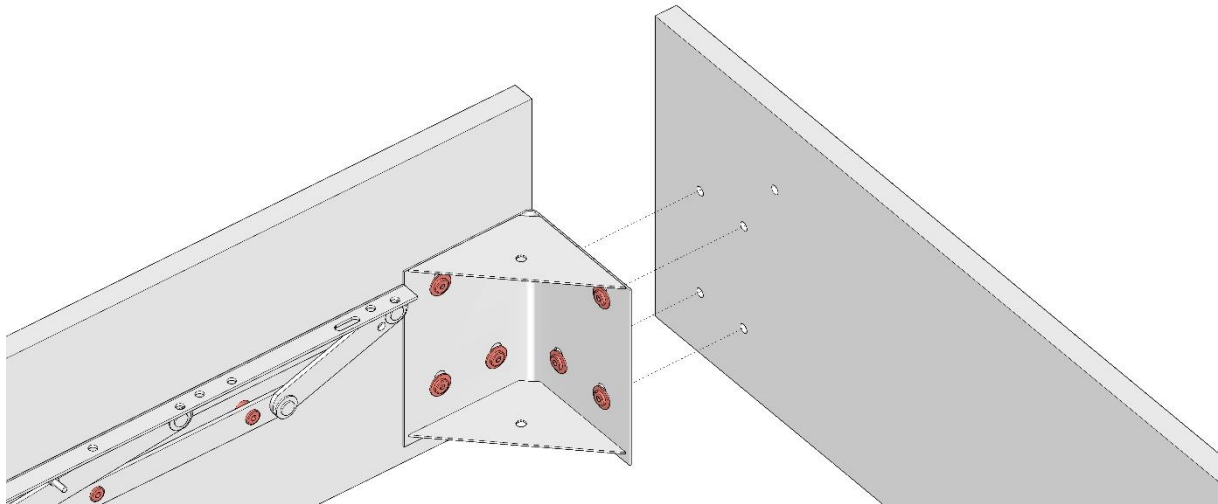


Step 3: Attach the Leg

- a. attach all four legs by using nut and washer
- b. Tighten the all loosely bolted fixings of Corner bracket attached to side and cross rails of the bed as frame is settled now in gravitational force.

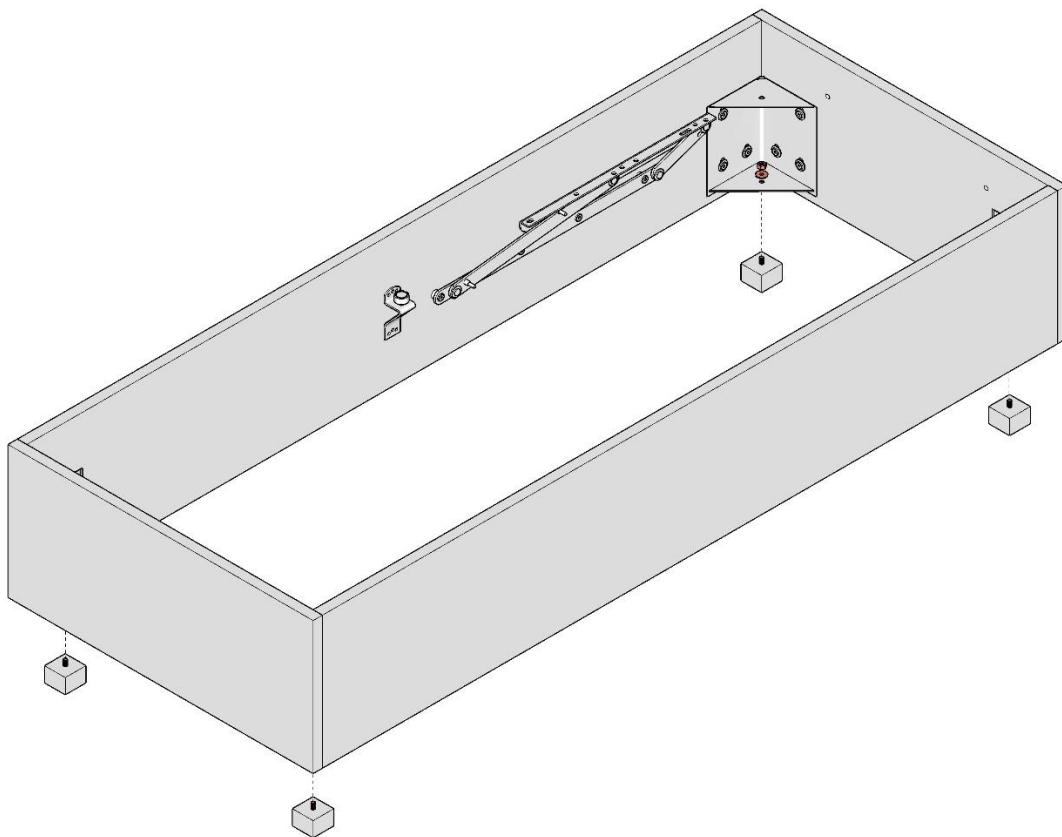

Step 4: Assemble the Bed Base Frame by using instruction.

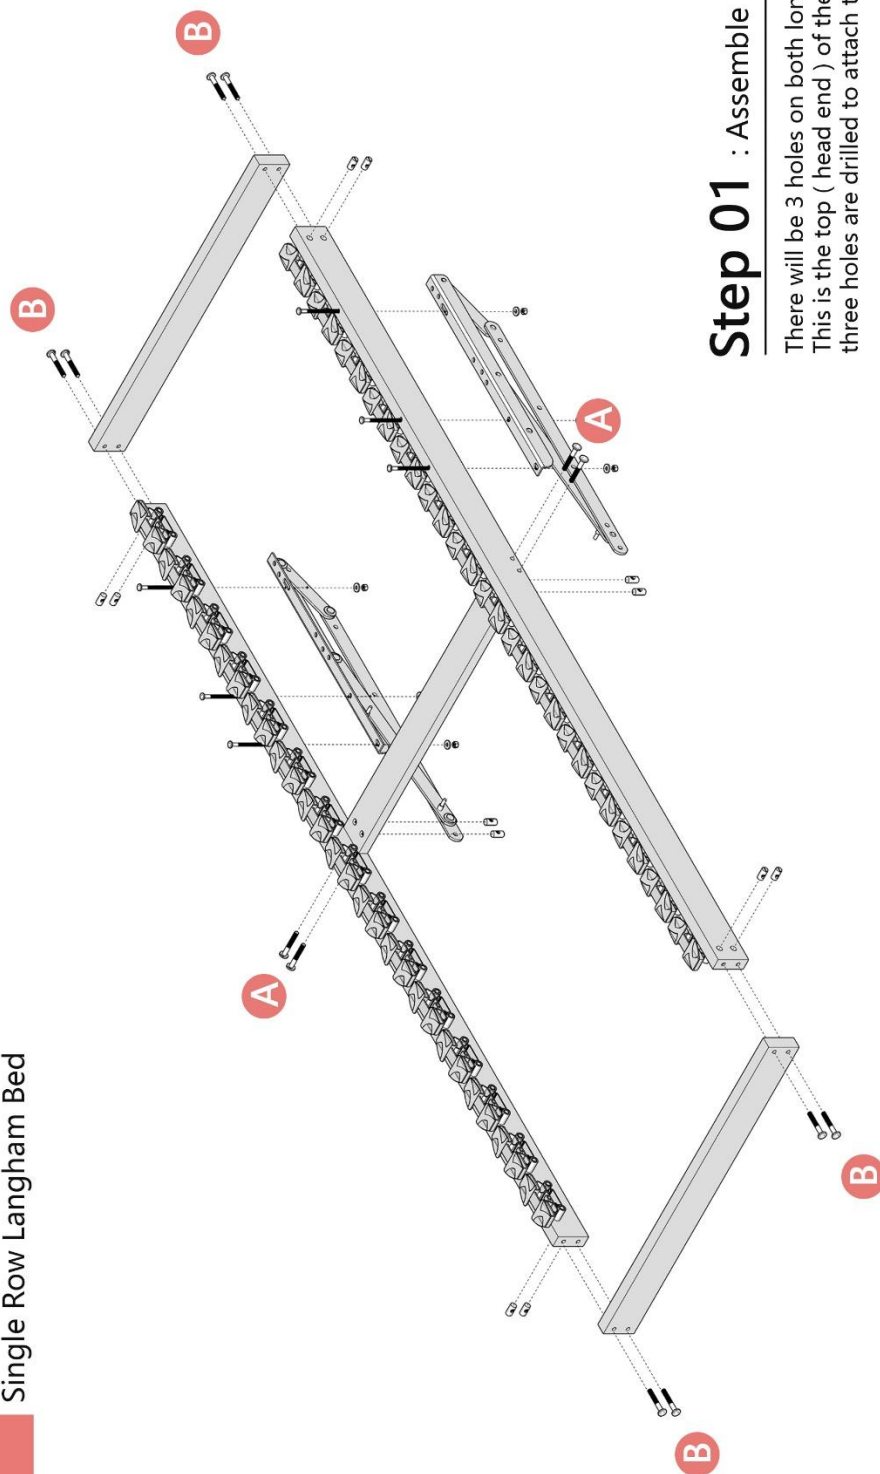

Step 01 : Assemble Framework

There will be 3 holes on both long side rails.
This is the top (head end) of the bed base. The
three holes are drilled to attach the bed Hinges.

Step I : Join A


Step II : Join B

A 20mm Cross Dowels &
60mm Furniture Connector Bolts


B 25mm Cross Dowels &
60mm Furniture Connector Bolts


Step 5:

SBK. Attach the Bed base to Hinge

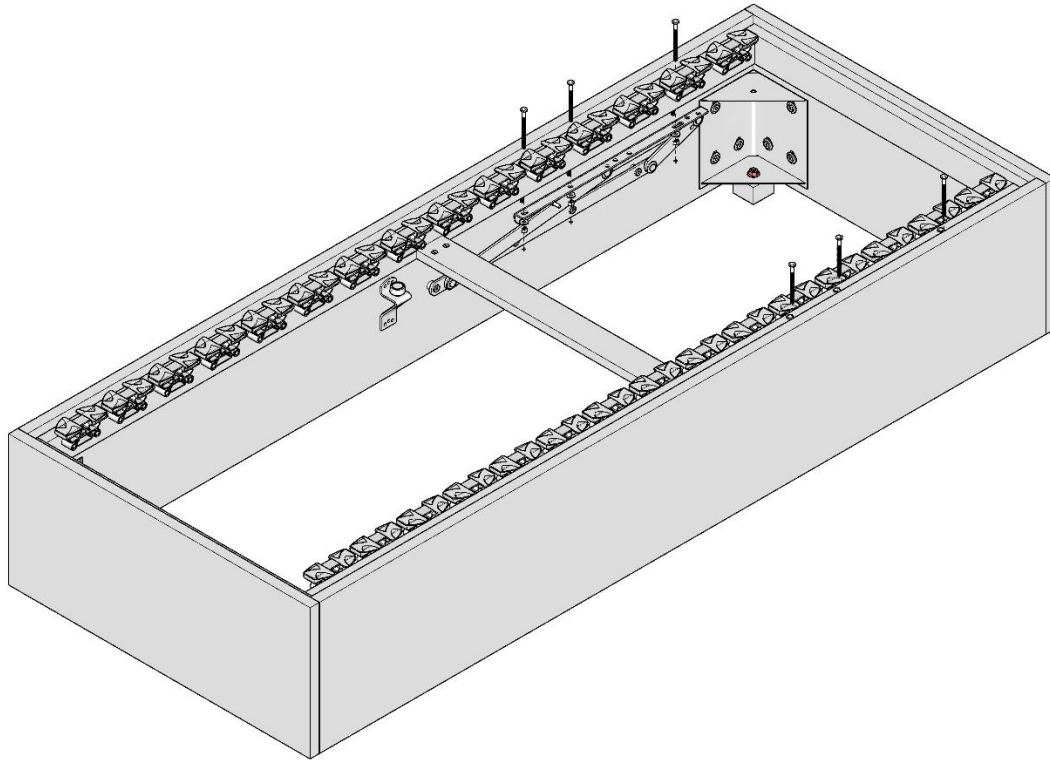


Step 6: Attach the Slats to the Bed Base

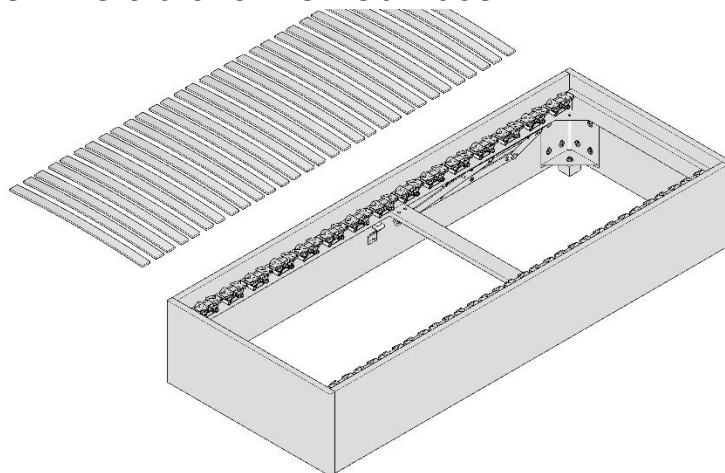

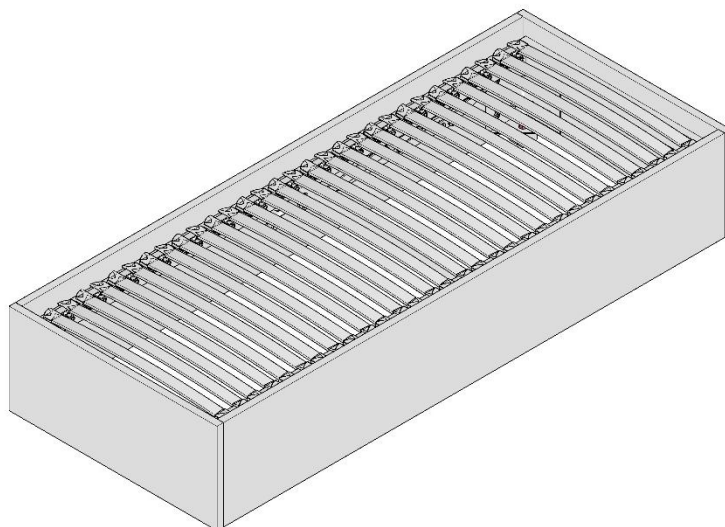

Step 7: Attach the Mattress Stopper.

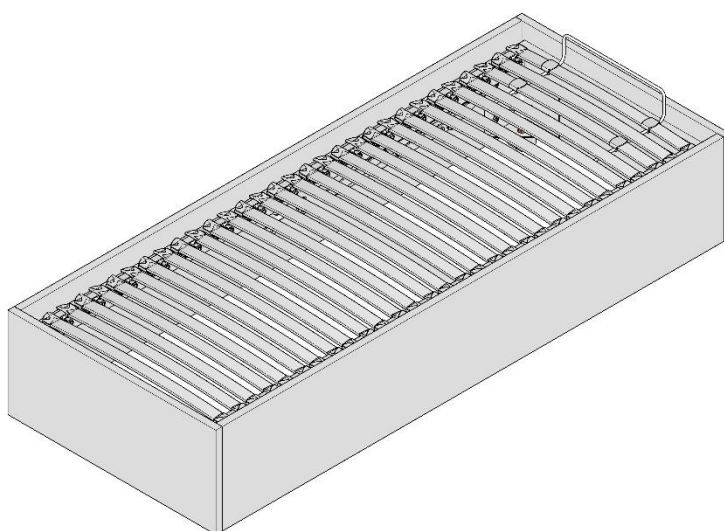

Step 8: Attach Gas Struts to Bed Hinges

Lift-up the bed base first to attach the Gas Struts. Gas Struts are very powerful, you will not be able to compress these without attaching them to the bed hinges. You need to use leverage from the Slatted Bed Base and the weight of the Mattress.

